

## ***Model C427***

<i><b>Function</b></i>	<i><b>Format</b></i>	<i><b>Address Hex</b></i>	<i><b>Data Hex</b></i>	<i><b>Address Dec</b></i>	<i><b>Data Dec</b></i>	<i><b>Comment</b></i>
AM	NEC	877C	82	34684	130	
Blend	NEC	877C	35	34684	53	
Delete	NEC	877C	F6	34684	246	
Dimmer	NEC	877C	F2	34684	242	
FM	NEC	877C	81	34684	129	
Memory	NEC	877C	F5	34684	245	
Power Off	NEC	877C	F1	34684	241	
Power On	NEC	877C	F0	34684	240	
Preset Down	NEC	877C	D1	34684	209	
Preset Up	NEC	877C	D2	34684	210	
Search Down	NEC	877C	86	34684	134	
Search Up	NEC	877C	87	34684	135	
Sleep	NEC	877C	F3	34684	243	
Tune Down	NEC	877C	D3	34684	211	
Tune Up	NEC	877C	D4	34684	212	
Tuner / Band	NEC	877C	DD	34684	221	
Tuner 0	NEC	877C	C7	34684	199	
Tuner 1	NEC	877C	8A	34684	138	
Tuner 2	NEC	877C	8E	34684	142	
Tuner 3	NEC	877C	92	34684	146	
Tuner 4	NEC	877C	96	34684	150	
Tuner 5	NEC	877C	8B	34684	139	
Tuner 6	NEC	877C	8F	34684	143	
Tuner 7	NEC	877C	93	34684	147	
Tuner 8	NEC	877C	97	34684	151	
Tuner 9	NEC	877C	98	34684	152	
Tuner Enter	NEC	877C	C5	34684	197	
Tuner Mode	NEC	877C	37	34684	55	