

NAD Electronics

C427 Command List (RS232 and Ethernet)

Notes

- Send a Carriage Return <CR> before and after each command
- In addition to using the <=> operator, each [Prefix].[Variable] can be incremented, decremented, or queried by using <+>, <->, or <?> operators.

Main.IR.Channel	Operators: =/+/-/?
------------------------	--------------------

Possible Values:

Range 0 - 2

Description: Set IR Channel

Example: <CR>Main.IR.Channel=0<CR>

Main.Model	Operators: ?
-------------------	--------------

N/A

Description: Check Model

Example: <CR>Main.Model?<CR>

Main.Power	Operators: =/+/-/?
-------------------	--------------------

Possible Values:

Off

On

Description: Power unit off

Example: <CR>Main.Power=Off<CR>

Main.Sleep	Operators: =/+/-/?
-------------------	--------------------

Possible Values:

Range 0 - 90

Description: Number of minutes for sleep function

Example: <CR>Main.Sleep=0<CR>

Main.Version	Operators: ?
---------------------	--------------

N/A

Description: Check current firmware version

Example: <CR>Main.Version?<CR>

Tuner.AM.Frequency	Operators: =/+/-/?
---------------------------	--------------------

Possible Values:

String

Description: AM Frequency String (ie. "680")

Example: <CR>Tuner.AM.Frequency=String<CR>

Tuner.Band	Operators: =/+/-/?
-------------------	--------------------

Possible Values:

FM
AM

Description: Set the Tuner band to FM

Example: `<CR>Tuner.Band=FM<CR>`

Tuner.FM.Frequency	Operators: =/+/-/?
---------------------------	--------------------

Possible Values:

String

Description: FM Frequency String (ie. "102.1")

Example: `<CR>Tuner.FM.Frequency=String<CR>`

Tuner.FM.Mute	Operators: =/+/-/?
----------------------	--------------------

Possible Values:

Off
On

Description: Turns FM Mute off

Example: `<CR>Tuner.FM.Mute=Off<CR>`

Tuner.FM.RDSName	Operators: ?
-------------------------	--------------

N/A

Description: Current Stations RDS Name

Example: `<CR>Tuner.FM.RDSName?<CR>`

Tuner.FM.RDSText	Operators: ?
-------------------------	--------------

N/A

Description: Current Stations RDS Text

Example: `<CR>Tuner.FM.RDSText?<CR>`

Tuner.Preset	Operators: =/+/-/?
---------------------	--------------------

Possible Values:

Range 1 - 40

Description: The current Preset number

Example: `<CR>Tuner.Preset=1<CR>`