

CD 10 ADDENDUM SHEET

USING CD 10 REMOTE CONTROL

CD 10 remote control replaces both CD 8 and CD 9 remote controls. CD 10 is a combination of both CD 8 and CD 9.

APPLIES TO C 538, C 545BEE, C 546BEE, C 565BEE AND C 568

1 ON : Unit is powered up from Standby mode to operating mode.

2 OFF : Unit goes to Standby mode.

3 RANDOM : Tracks/files are played at random mode.

PROGRAM : Enter or exit program mode

REPEAT : Track, file, folder or whole disc is repeated.

RPT A-B : Playback sequence is repeated.

4 STOP : Playback is stopped.

5 ▲ : Disc tray is opened or closed.

6 ►► : Next track/ file is played.

◄◄ : Beginning of current track/file or previous track/file is played.

►► : Playback is scanned or searched fast forward.

◄◄ : Playback is scanned or searched fast backward.

► : Playback is started.

7 II : Playback is paused.

8 FILE: Scroll up or down WMA or MP3 file list.

9 FOLDER: Scroll up or down the folder list.

10 DIM: Display brightness is reduced, restored or turned off.

ENTER : MP3 or WMA file is selected for playback.

11 NUMBER BUTTONS 0 - 9: Track or file number is directly accessed or selected.

12 DELETE: Programmed track/file is cleared.

13 TIME: Playback time and other information are shown. This has the same function as the front panel DISPLAY button.

14 SHIFT: Use in combination with CD, USB, OPT, SRC and FILTER function buttons

APPLIES TO C 546BEE, C 565BEE AND C 568

15 CD: Press and hold SHIFT for around 1 second and then CD to select CD as the active source.

USB: Press and hold SHIFT for around 1 second and then USB to select USB as the active source.

OPT: Press and hold SHIFT for around 1 second and then OPT to select Optical as the active source. Applies only to C 565BEE.

SRC: Press and hold SHIFT for around 1 second and then SRC to select desired SRC level. Repeat the same process to toggle and select desired SRC level. Applies only to C 565BEE.

APPLIES TO C 545BEE, C 546BEE, C 565BEE AND C 568

16 FILTER: Press and hold SHIFT for around 1 second and then FILTER to select desired FILTER level.

Repeat the same process to toggle and select desired FILTER level - filter number (applies to C 565BEE and C 568) or switch between NORMAL and SLOW bandwidth (applies to C 545BEE and C 546BEE).

