

## ***Model T785***

<b><i>Function</i></b>	<b><i>Format</i></b>	<b><i>Address Hex</i></b>	<b><i>Data Hex</i></b>	<b><i>Address Dec</i></b>	<b><i>Data Dec</i></b>	<b><i>Comment</i></b>
A/V Preset 1	NEC	877C	3A	34684	58	
A/V Preset 2	NEC	877C	3B	34684	59	
A/V Preset 3	NEC	877C	C3	34684	195	
A/V Preset 4	NEC	877C	C4	34684	196	
A/V Preset 5	NEC	877C	C6	34684	198	
AM	NEC	877C	82	34684	130	
Audyssey	NEC	877C	C9	34684	201	
Bypass	NEC	877C	DB	34684	219	
Center Volume Down	NEC	877C	D5	34684	213	
Center Volume Up	NEC	877C	D0	34684	208	
Cursor Down	NEC	877C	28	34684	40	
Cursor Left	NEC	877C	29	34684	41	
Cursor Right	NEC	877C	2A	34684	42	
Cursor Up	NEC	877C	27	34684	39	
DB (XM or DAB)	NEC	877C	7E	34684	126	
Delay	NEC	877C	DA	34684	218	
Dimmer	NEC	877C	38	34684	56	
Direct	NEC	877C	64	34684	100	
Display	NEC	877C	26	34684	38	
Dolby Pro Logic IIx - Movie	NEC	877C	6B	34684	107	
Dolby Pro Logic IIx - Music	NEC	877C	6A	34684	106	
Dolby Surround EX	NEC	877C	69	34684	105	
DTS NEO:6 - Cinema	NEC	877C	6C	34684	108	
DTS NEO:6 - Music	NEC	877C	6D	34684	109	
EARS	NEC	877C	6F	34684	111	
Enhanced Stereo 1	NEC	877C	70	34684	112	
Enter	NEC	877C	32	34684	50	
FM	NEC	877C	81	34684	129	
Front	NEC	877C	85	34684	133	
Input 1	NEC	877C	C2	34684	194	
Input 2	NEC	877C	C0	34684	192	
Input 3	NEC	877C	C1	34684	193	
Input 4	NEC	877C	30	34684	48	
Input 5	NEC	877C	31	34684	49	
Input 6	NEC	877C	1E	34684	30	
Input 7	NEC	877C	60	34684	96	
Late Night	NEC	877C	2F	34684	47	
Matrix 7.1	NEC	877C	6E	34684	110	
Memory	NEC	877C	F5	34684	245	
MP	NEC	877C	89	34684	137	
Mute	NEC	877C	94	34684	148	
Off	NEC	877C	C8	34684	200	
On	NEC	877C	25	34684	37	
Power Toggle	NEC	877C	80	34684	128	
Preset Down	NEC	877C	D1	34684	209	
Preset Up	NEC	877C	D2	34684	210	

## ***Model T785***

<i><b>Function</b></i>	<i><b>Format</b></i>	<i><b>Address Hex</b></i>	<i><b>Data Hex</b></i>	<i><b>Address Dec</b></i>	<i><b>Data Dec</b></i>	<i><b>Comment</b></i>
Search Down	NEC	877C	86	34684	134	
Search Up	NEC	877C	87	34684	135	
Sleep	NEC	877C	20	34684	32	
Speaker A	NEC	877C	CE	34684	206	
Speaker B	NEC	877C	CF	34684	207	
Stereo Downmix	NEC	877C	65	34684	101	
Sub Volume Down	NEC	877C	D9	34684	217	
Sub Volume Up	NEC	877C	D8	34684	216	
Surround Mode	NEC	877C	CC	34684	204	
Surround Volume Down	NEC	877C	D7	34684	215	
Surround Volume Up	NEC	877C	D6	34684	214	
Test	NEC	877C	CD	34684	205	
Tone	NEC	877C	39	34684	57	
Tone Defeat	NEC	877C	DC	34684	220	
Tune Down	NEC	877C	D3	34684	211	
Tune Up	NEC	877C	D4	34684	212	
Tuner	NEC	877C	DD	34684	221	
Tuner 1	NEC	877C	8A	34684	138	
Tuner 2	NEC	877C	8E	34684	142	
Tuner 3	NEC	877C	92	34684	146	
Tuner 4	NEC	877C	96	34684	150	
Tuner 5	NEC	877C	8B	34684	139	
Tuner 6	NEC	877C	8F	34684	143	
Tuner 7	NEC	877C	93	34684	147	
Tuner 8	NEC	877C	97	34684	151	
Tuner 9	NEC	877C	98	34684	152	
Tuner Enter	NEC	877C	C5	34684	197	
Tuner Mode	NEC	877C	37	34684	55	
Volume Down	NEC	877C	8C	34684	140	
Volume Up	NEC	877C	88	34684	136	
Zone AM	NEC	877C	A1	34684	161	
Zone CD	NEC	877C	A5	34684	165	
Zone Disc	NEC	877C	A6	34684	166	
Zone FM	NEC	877C	A2	34684	162	
Zone Local	NEC	877C	B3	34684	179	
Zone Mute	NEC	877C	A0	34684	160	
Zone Power Off	NEC	877C	B1	34684	177	
Zone Power On	NEC	877C	B0	34684	176	
Zone Power Toggle	NEC	877C	B4	34684	180	
Zone Preset Down	NEC	877C	A4	34684	164	
Zone Preset Up	NEC	877C	A3	34684	163	
Zone Search Down	NEC	877C	B8	34684	184	
Zone Search Up	NEC	877C	B7	34684	183	
Zone Source Down	NEC	877C	BB	34684	187	
Zone Source Up	NEC	877C	BA	34684	186	
Zone Tune Down	NEC	877C	B6	34684	182	

## ***Model T785***

<b><i>Function</i></b>	<b><i>Format</i></b>	<b><i>Address Hex</i></b>	<b><i>Data Hex</i></b>	<b><i>Address Dec</i></b>	<b><i>Data Dec</i></b>	<b><i>Comment</i></b>
Zone Tune Up	NEC	877C	B5	34684	181	
Zone Tuner	NEC	877C	AF	34684	175	
Zone Video 1 (DVD)	NEC	877C	A8	34684	168	
Zone Video 2 (SAT)	NEC	877C	A9	34684	169	
Zone Video 3 (VCR)	NEC	877C	AA	34684	170	
Zone Video 4	NEC	877C	AB	34684	171	
Zone Video 5	NEC	877C	AC	34684	172	
Zone Video 6	NEC	877C	AD	34684	173	