


NAD® MDC BluOS 2

Mounting Instructions

WHAT'S IN THE BOX

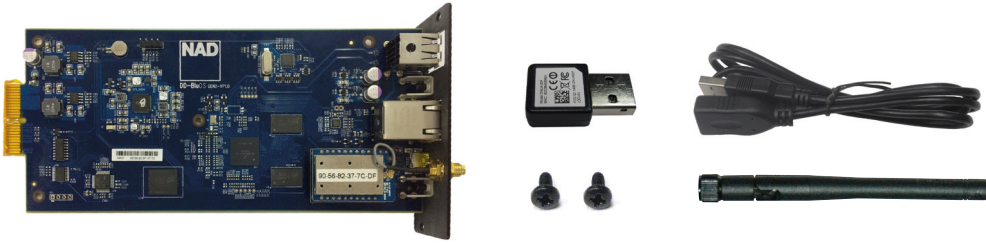

IMPORTANT NOTES

- Download "Configuring MDC BluOS 2" from nadelectronics.com/product/mdc-bluos-2 for instructions on how to setup your MDC BluOS 2.
- MDC BluOS 2 can be integrated with the following compatible NAD products - C368, C388, C390DD, M12 and M32.
- The reference model used in this mounting instruction is C368.

INSTALL MDC BluOS 2

STEP A

Remove the MDC Classic cover and top cover by loosening and taking out the screws holding them in place.

Installation location of MDC BluOS 2 (as viewed from the rear panel)

C368: Either slot

C388: Either slot

C390DD: Second slot from the left side

M12: Any of the three slots from the right side



M32: Any of the two slots from the right side



STEP B

- 1 Take note of the unique Wi-Fi MAC address (the same can be found on the MDC BluOS 2 metal back plate). This is needed when configuring the MDC BluOS 2.
- 2 Remove the protective tape from the contact terminals.
- 3 Slide MDC BluOS 2 module through the rail pushing all the way to the corresponding connectors.
- 4 Make sure MDC BluOS 2 module is locked in.

Use corresponding screws to fix back into place MDC BluOS 2 module and top cover.

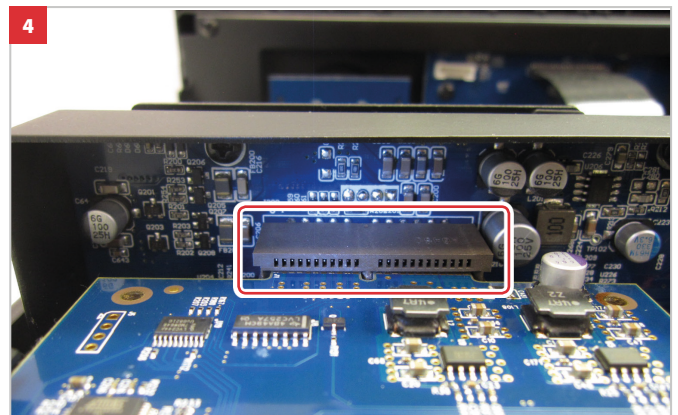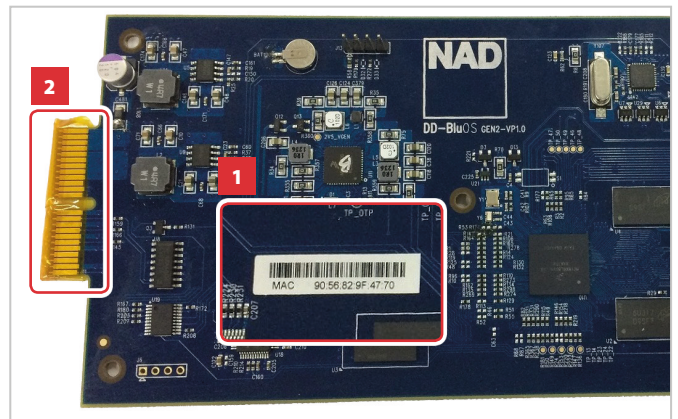

CONNECT!

WIRED CONNECTION*

Connect Ethernet cable (not supplied).



BLUETOOTH CONNECTION

Connect supplied Bluetooth antenna.



WIRELESS CONNECTION*

Connect dongle. If wireless connectivity is poor, connect dongle to the supplied extension cable and straighten out for better reception.



*Requires broadband router that supports Ethernet and/or WiFi standards.